

# VRK Series System Operation Guide



**Call buttons**

Press the appropriate button and wait for a reply. A reassurance tone will be heard.

**Trades button (optional)**

For Postman and deliveries. Press and hold during the allocated time to unlock the door.

**Microphone**

**Speaker**

# 801 Audio Telephone



## **Key button**

This button opens the calling entrance