

BSX Series System Operation Guide with 801 Phone



Call buttons

Press the appropriate button and wait for a reply. A reassurance tone will be heard. Press again if required.

Trades button (optional)

For Postman and deliveries. Press during the allocated time to unlock the door.

Microphone

Speaker

801 Audio Telephone



Key button

This button opens the calling entrance