

Operation Guide

VRK Series System with optional ACT Fob reader



Call buttons
Press the appropriate button and wait for a reply. A reassurance tone will be heard.

Trades button (optional)
For Postman and deliveries. Press during the allocated time to unlock the door.

Microphone

Speaker

ACT Fob reader (optional)



Status LED

Normally red changing to green when unlocked



Place the Fob less than 10mm from the grey window to unlock the entrance

801 Audio Telephone



Key button

This button opens the calling entrance