

## BF-AMP Speech unit



### Assembly notes

1. This **cannot** be used as a replacement for BF-AMP Speech units build 1.
2. When replacing an existing BF-AMP with microphone, ensure the microphone does not move while tightening the nut, as this may scratch the front. Use a 15mm spanner and pliers on the back.
3. Make sure the microphone hole is pointing down.



Microphone  
hole

4. The microphone red wire connects to MIC+ and black wire to MIC- on the main BF-AMP.

|                      |                    |
|----------------------|--------------------|
| Operating voltage:   | 10.5V - 15V DC     |
| Current consumption: | 250mA max.         |
| Main amplifier size: | 98mm x 60mm x 24mm |